




WINSIG
Antenna Systems

Winsig 3.1 Camping Antenna Usage Guide

The WINSIG 3.01Camper is a single plane log periodic antenna with a unique swivel function to receive transmissions in both the vertical and horizontal planes.

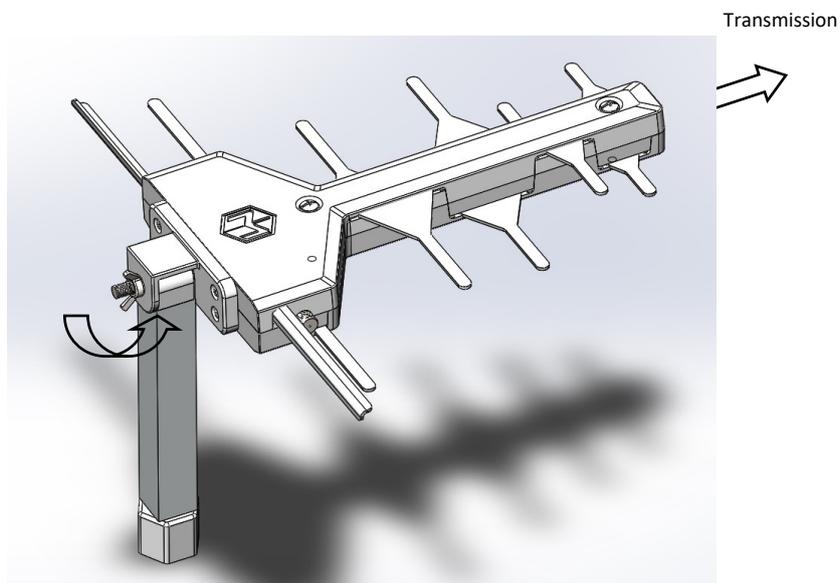

1. Connection of the antenna to your Caravan TV and power supply is shown in the diagram overleaf.
2. The orientation shown in the above picture is for receiving horizontal signals, in order to receive vertical signals, loosen the wing nut, and swing the antenna 90 degrees, until the bracket prevents further movement, then re-tighten the wing nut.
3. Turn the antenna so that the nose faces the nearest transmission tower. **Note: there are several very handy apps for both Apple and Android phones. These will show you via GPS navigation, in which direction to point your antenna. They are free, and available from the respective application stores.**
4. Don't forget to run the auto tuning function on your television each time you reposition your antenna, or change from vertical to horizontal orientation.

The electronic signal booster is located inside the plastic shell of the antenna. **Note: the power injector must be connected and the power switched on for the antenna to receive any television signals.**

Warranty

Your Winsig Camping Antenna features a 12 Month Warranty. Please remember to register your product online at


<http://www.winsig.com.au/warranty-registration>.



WINSIG
Antenna Systems

Winsig 3.1 Camping Antenna Usage Guide

The WINSIG 3.0 Camper is a single plane log periodic antenna with a unique swivel function to receive transmissions in both the vertical and horizontal planes.

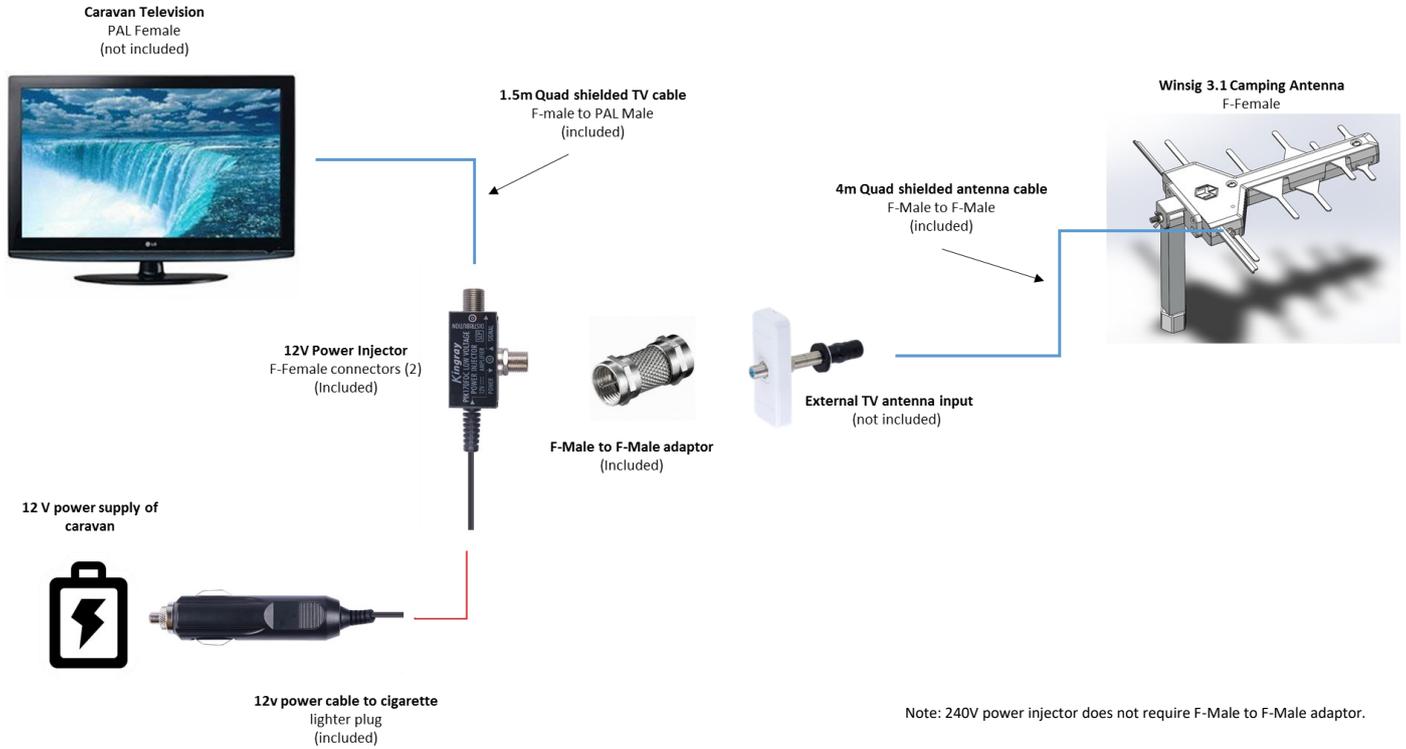

We love feedback. Please like our page on Facebook and send us an e-mail with your thoughts or a photo of your new installation at enquiries@winsig.com.au. We will try to make sure your photo makes it onto our page.